



PARTS LIST OF MAXXSP20

ITEM#	DESCRIPTION	PART#(20)	ITEM#	DESCRIPTION	PART#(20)
1	Drag Knob Assembly	1529974	32	Bearing 7*14*4	1085280
2	Retainer Ring	1085295	33	Bearing Holder	1115558
3	Key Washer	1085296	34	Clutch Assembly	1102144
4	Eared Washer	1085297	35	Pinion	1536763
5	Washer	1085298	36	Clutch Spring	1252716
6	Spool	1529987	37	Handle Screw	1529964
7	Spool Assembly	1529988	38	Washer	1092781
8	Washer (T=0.5)	1178949	39	Body	1529992
9	Click Gear	1126316	40	Slider Retainer	1126332
10	Main Shaft	1529977	41	Screw	1188428
11	Nut Set Screw	1126258	42	Slider	1280427
12	Rotor Nut	1085606	43	Screw	1126275
13	Bail Arm Screw	1448222	44	Rear Cover	1529985
14	Bail Holder	1529978	45	Oscillation Gear	1256966
15	Bushing	1188261	46	Bushing	1108938
16	Screw	1536760	47	Screw	1497921
17	Bail Arm	1529979	48	Reduction Gear	1256967
18	Brass Bushing	1536761	49	Bearing 7*11*3	1092725
19	Line Roller	1529959	50	Drive Gear	1280426
20	Washer	1529960	51	Washer	1085287
21	Bail Assembly	1529989	52	Bearing 7*13*4	1252717
22	Screw	1411137	53	Body Cover	1529986
23	Bail Arm Cover	1529981	54	Screw	1447884
24	Trip Spring	1119106	55	Screw	1126084
25	Trip Linkage	1252713	56	Handle Rivet Assembly	1529969
26	Bail Slider	1126272	57	Bushing	1529970
27	Trip Bar	1529990	58	Handle Knob	1529971
28	Rotor	1529991	59	Screw	1119121
29	Screw	1117984	60	Handle Knob Cover	1529972
30	Bearing Retainer	1280406	61	Handle Assembly	1529973
31	Washer	1085287			